

Actual Battery Voltage

Manage or not the battery


Coeff to adjust the Chargeur voltage
Only visible on Dev Mode

Coeff to adjust the Battery voltage
Only visible on Dev Mode

Coeff to adjust the charge sense battery
Only visible on Dev Mode

Voltage to return to station

If the mower is into state OFF or ERROR
The PCB is automaticly totaly power OFF after
this duration

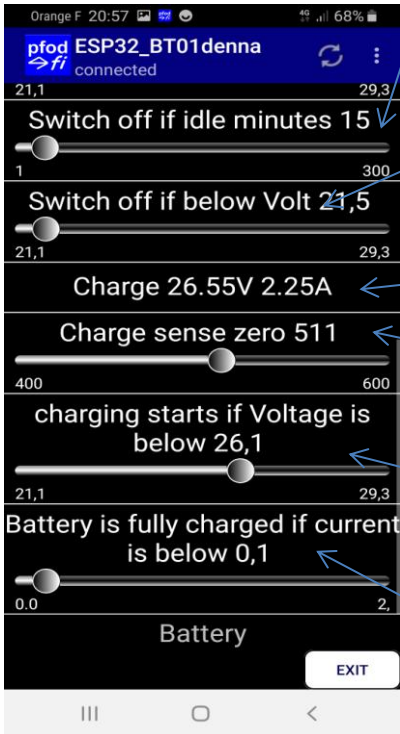

If the battery voltage is under this value
The PCB is automaticly totaly power OFF
to avoid damage

Actual Charge Voltage and sense

Not Use

The charging start if the voltage
is under this value,

The charging stop if the charging
sense is under this value,

